

Touch Controller Combo board, USB and RS232

PenMount PM 6500A5 / PM 6500A8, combo board USB & RS232, 60 x 26mm		
Part no.:	USB, 4-, 5- and 8-wire, with USB, Typ A, cable 1500mm	PenMount
1070.0068.01	4-Draht ZIF - connector with cable 450mm	PM 6500 A8
1070.0068.02	4-Draht AMPC - connector with cable 450mm	PM 6500 A8
1070.0068.03	8-Draht AMPC - connector with cable 450mm	PM 6500 A8
1070.0068.04	5-Draht AMPC - connector with cable 450mm	PM 6500 A5
RS232, 4-, 5- and 8-Draht, with sub-D connector 9-pin, cable 450mm		
1070.0068.11	4-Draht ZIF - connector with cable 450mm	PM 6500 A8
1070.0068.12	4-Draht AMPC - connector with cable 450mm	PM 6500 A8
1070.0068.13	8-Draht AMPC - connector with cable 450mm	PM 6500 A8
1070.0068.14	5-Draht AMPC - connector with cable 450mm	PM 6500 A5

Touch Controller board USB

PenMount PM 6300A5 / PM 6300A8, USB, 60 x 26mm		
Part No.:	USB, 4-, 5- and 8-Draht, with USB connector Typ A, cable 1500mm	
1070.0067.01	4-Draht ZIF - connector with cable 450mm	PM 6300 A8
1070.0067.02	4-Draht AMPC - connector with cable 450mm	PM 6300 A8
1070.0067.03	8-Draht AMPC - connector with cable 450mm	PM 6300 A8
1070.0067.04	5-Draht AMPC - connector with cable 450mm	PM 6300 A5

IC / Chip Combo

PenMount 6000, CHIP, RS232 and USB board design		
Part No.:		
1070.0049	DMC 6000, QFN-28pin, version 3.0.0	

Touch Controller Combo board, USB and RS232, 4- and 5-Draht Touch Screen, Touchscreen connectors on board

PenMount 6202B USB, full speed 12Mhz bps, 20 x 70mm		
Part No.:		
1070.0059.01	4-Draht ZIF 1mm, connector on board	PM 6202B, - CZ4
1070.0059.02	4-Draht AMPC 2,54mm, connector on board	PM 6202B, - CW4
1070.0059.03	5-Draht AMPC 2,54mm, connector on board	PM 6202B, - CW5
PenMount 6202B for RS232, 9600baud, non PnP mode, 20 x 70mm		
Part No.:		
1070.0059.11	4-Draht ZIF 1mm, connector on board	PM 6202B, - CZ4
1070.0059.12	4-Draht AMPC 2,54mm, connector on board	PM 6202B, - CW4
1070.0059.13	5-Draht AMPC 2,54mm, connector on board	PM 6202B, - CW5

Driver Software:

RS232: Windows NT/2000/2003/2008/XP/Vista/Win7, DOS, Windows CE 4.2 & 5.0.& 6.0, QNX, Linux Ubuntu, SUSE, Fedora,
USB: Windows NT/2000/2003/2008/XP/Vista/Win7 Windows CE 4.2 & 5.0.& 6.0
 Linux kernels, Ubuntu, QNX, CentOS, Fedora SuSE, etc.

Download: <http://www.amtouch.com.tw/resistive/touch-controller/driver/>

